


INSTALLATION MANUAL

8305A/8306A

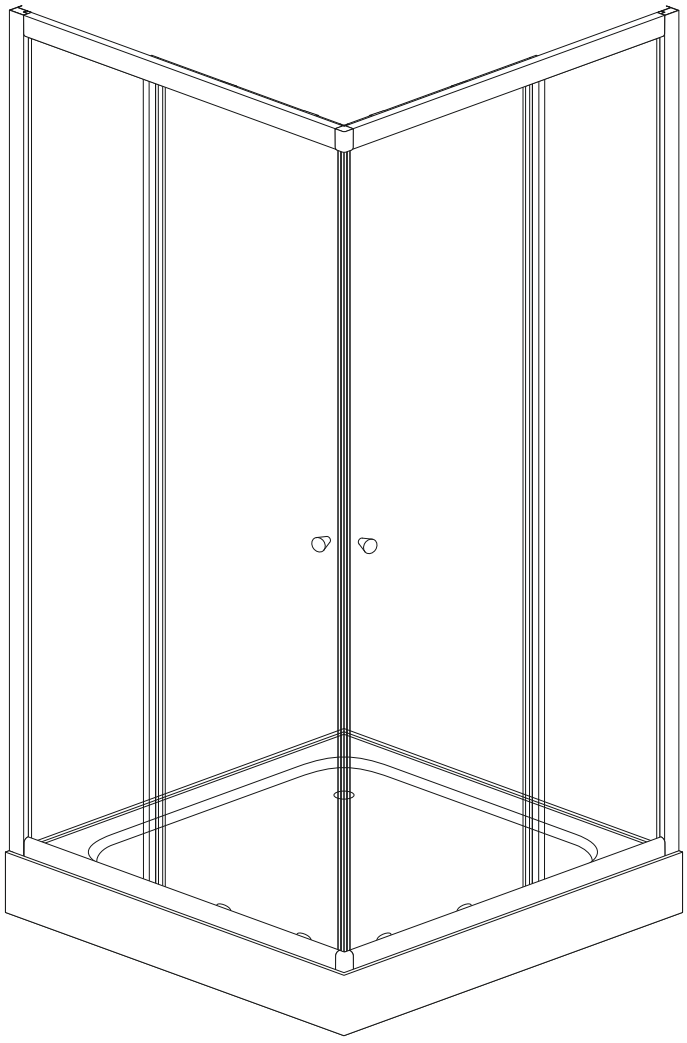


TOOLS NEEDED

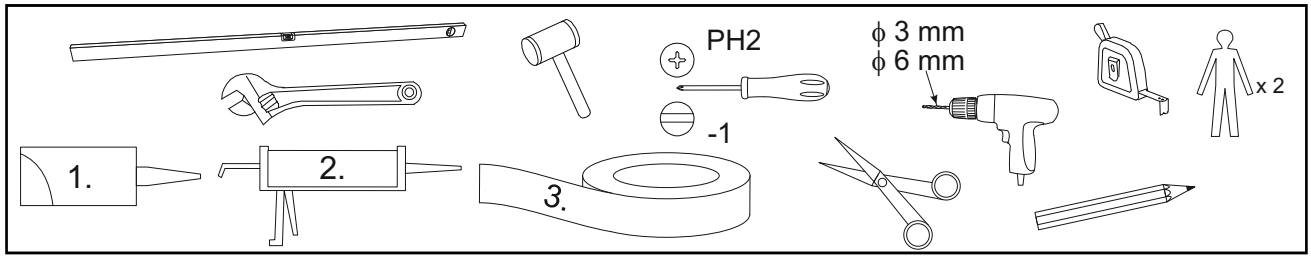


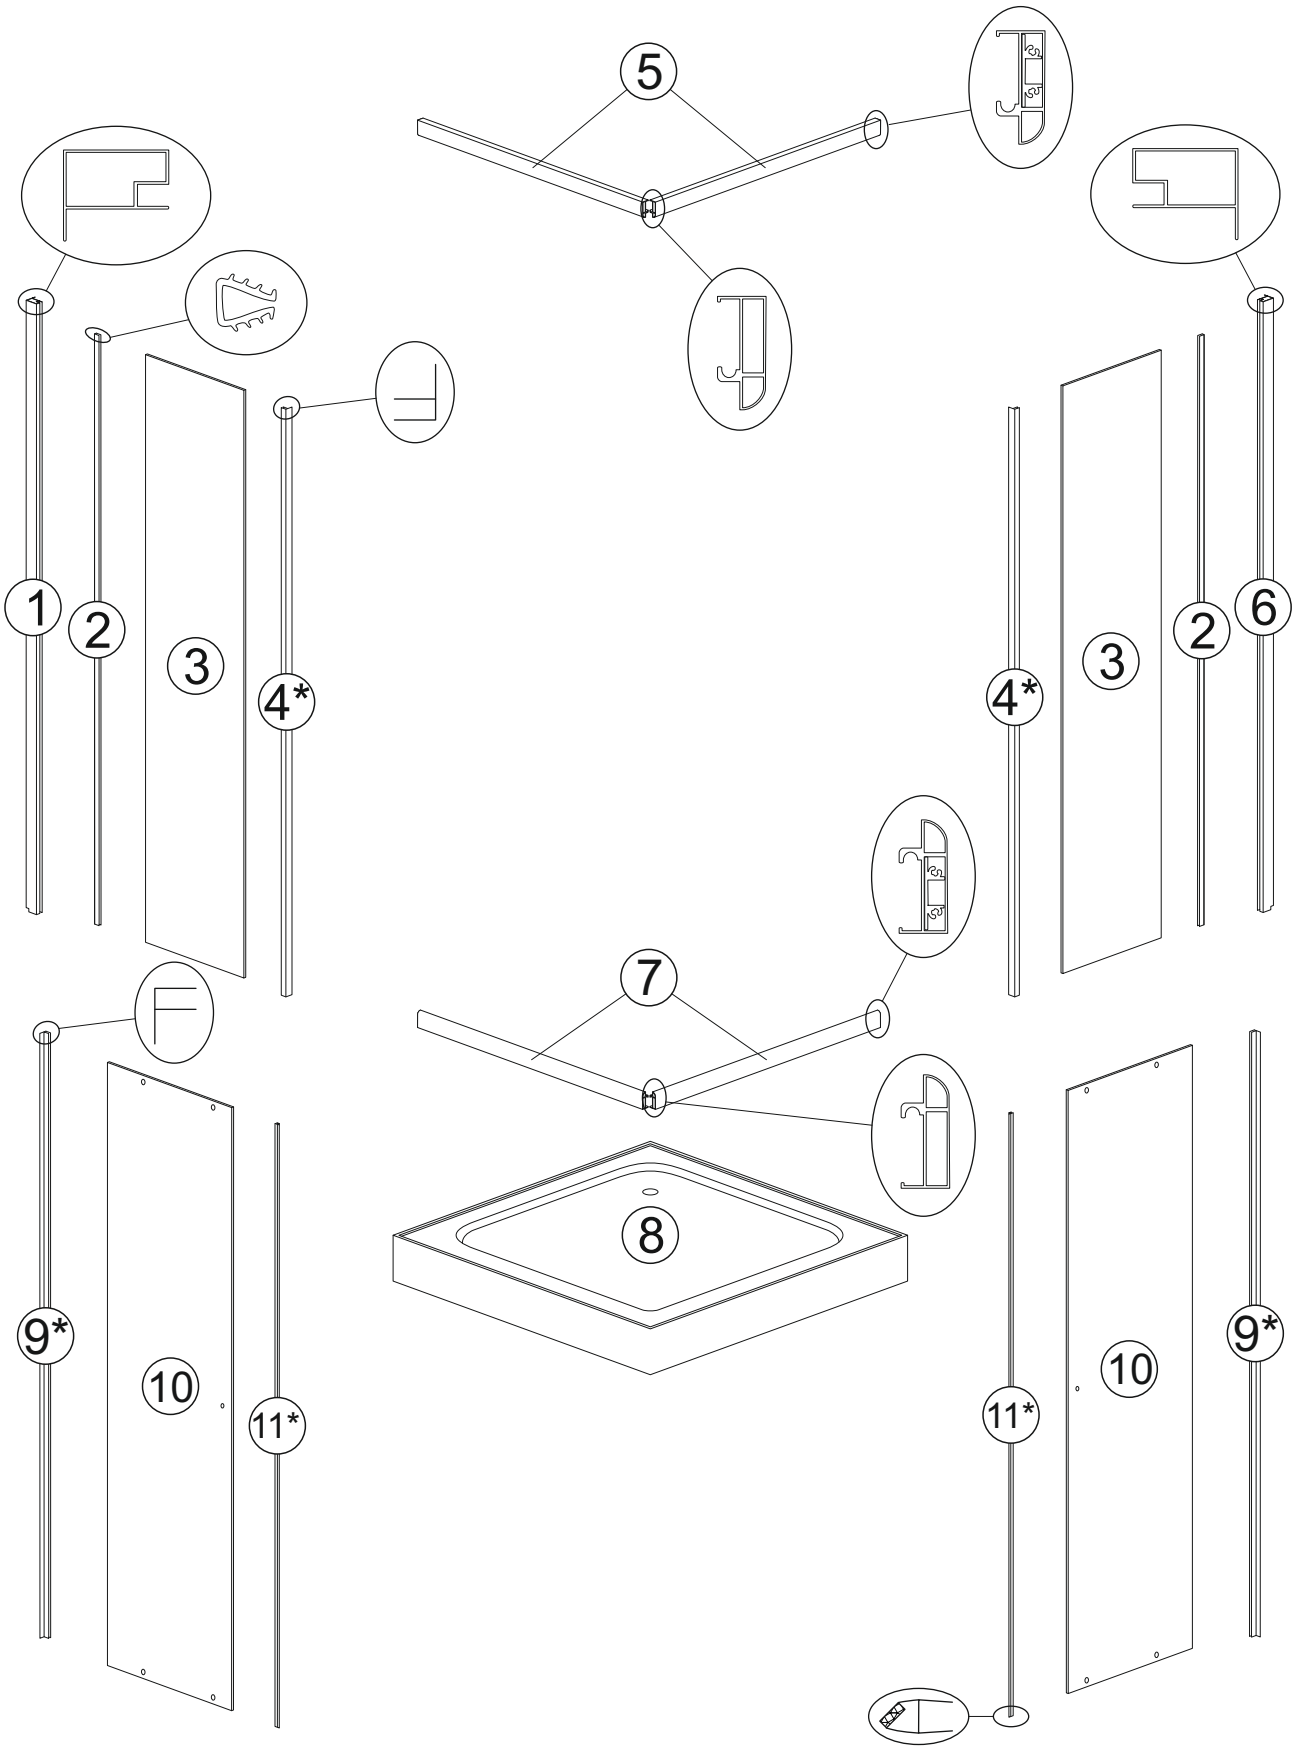



Ⓐ x 10 ϕ4x30 ϕ6x30	Ⓑ x 8 ϕ4x20	Ⓒ x 4 ϕ4x10	Ⓓ x 2 ϕ4x10	
Ⓔ x 1	Ⓕ x 4	Ⓖ x 4	Ⓗ x 2	


PRODUCT ASSEMBLY

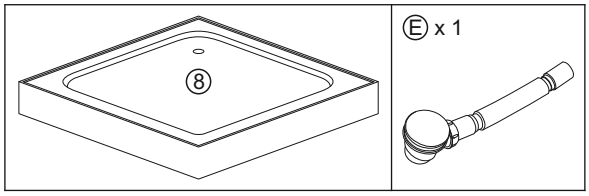


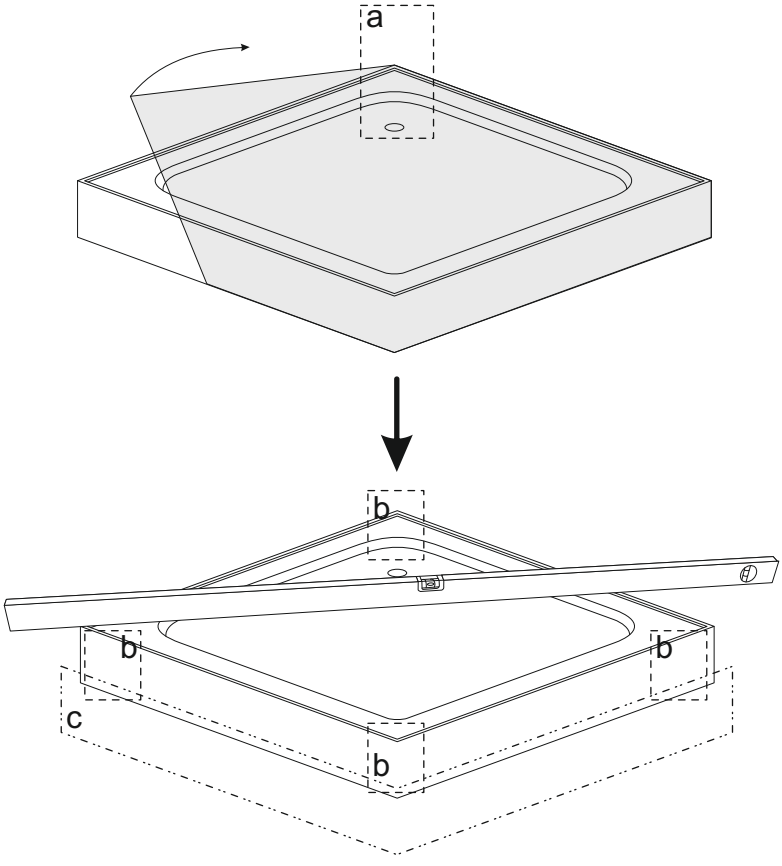


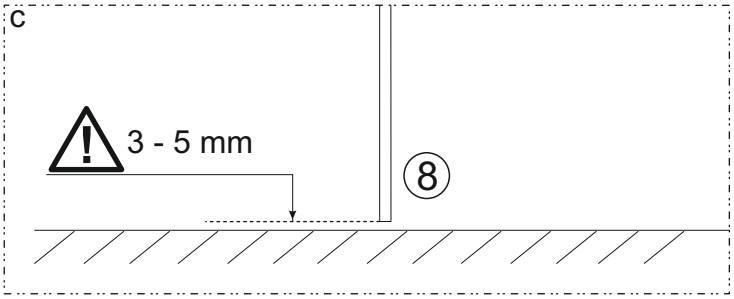


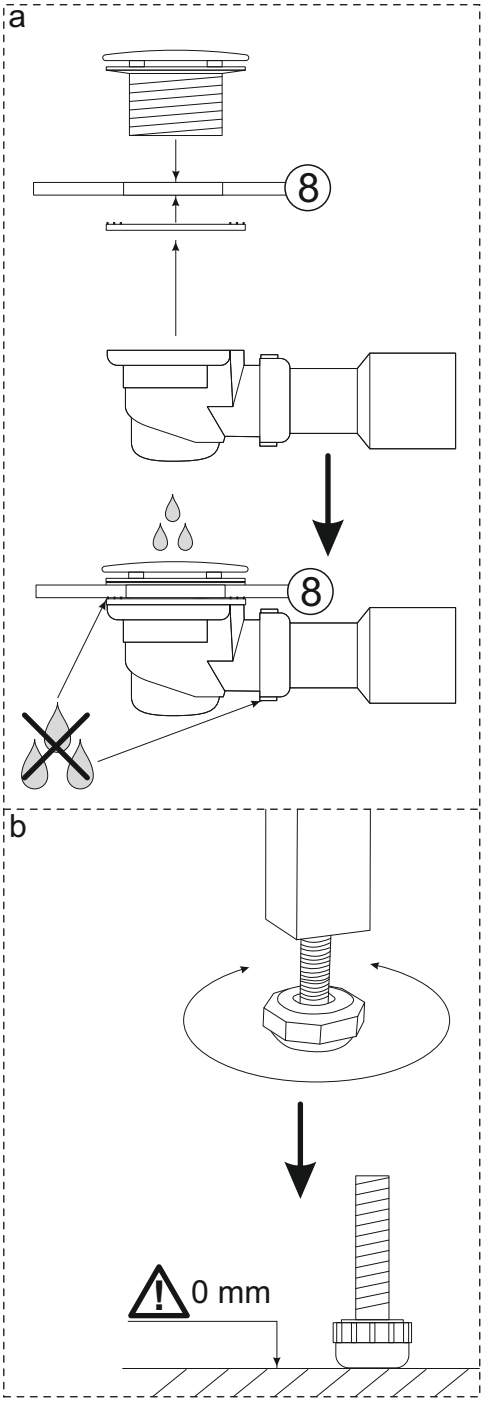


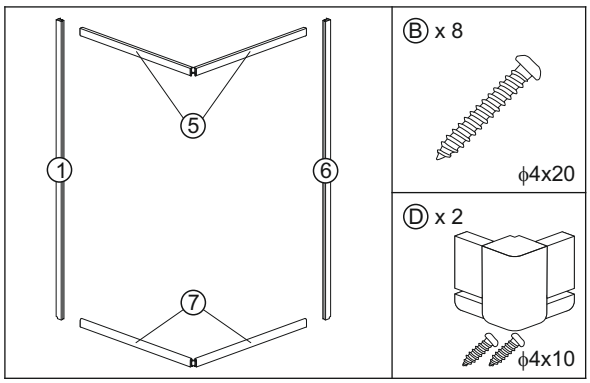

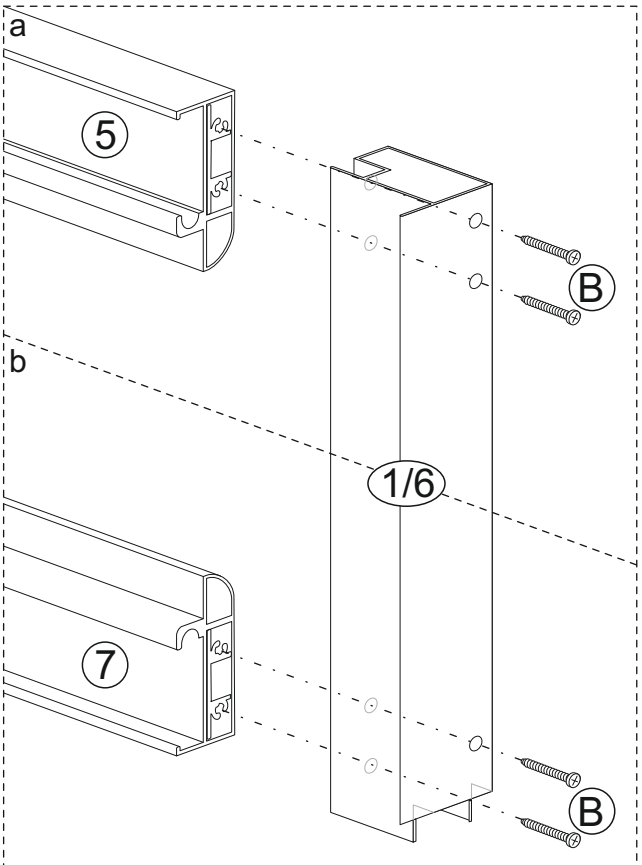


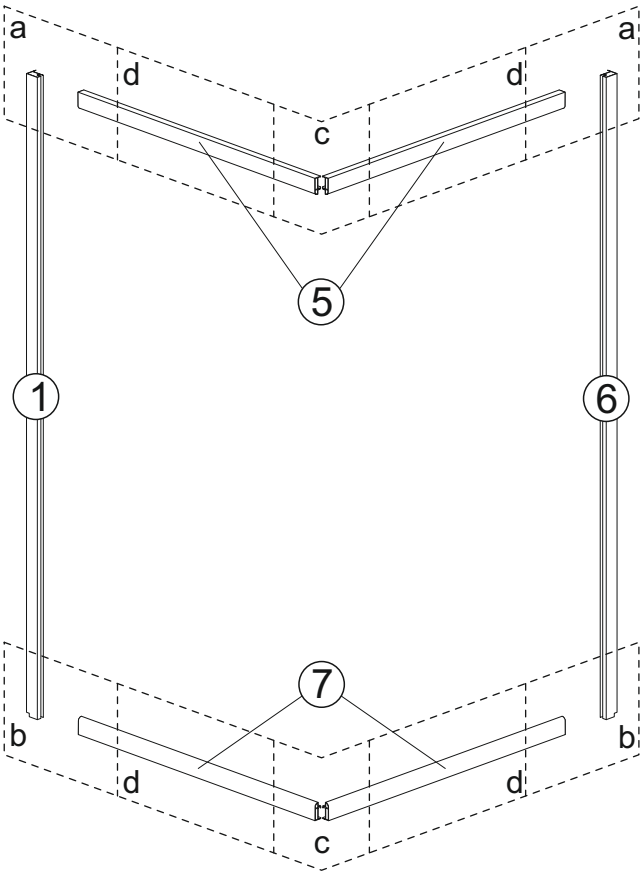


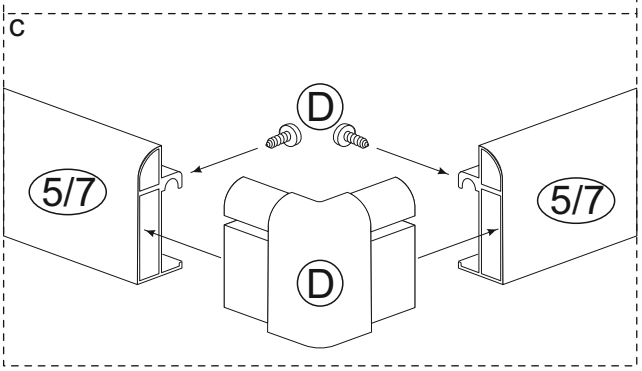


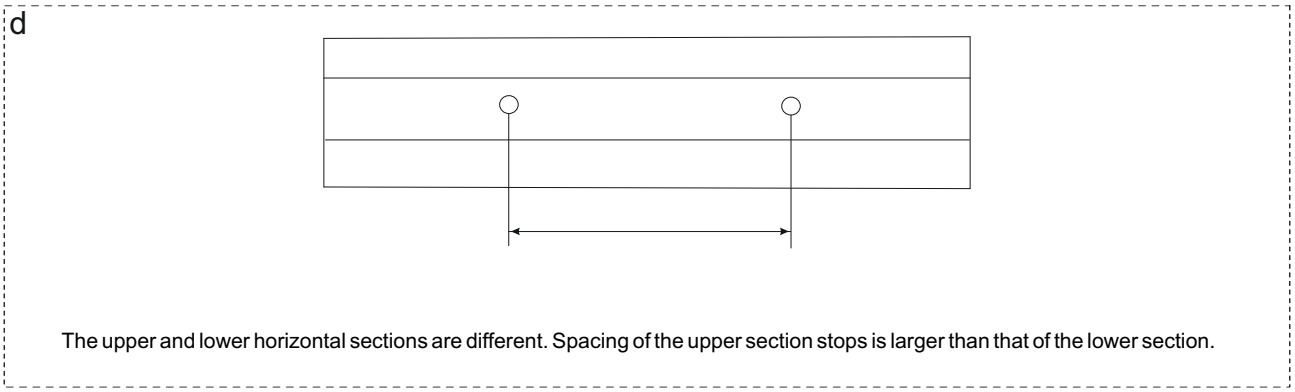


The upper and lower horizontal sections are different. Spacing of the upper section stops is larger than that of the lower section.

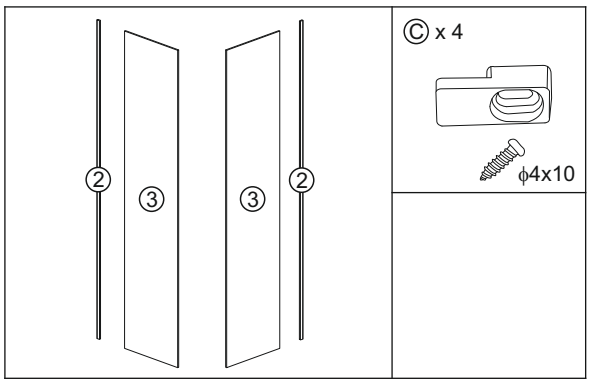

Ⓒ x 4
ϕ4x10
②
③
③
②

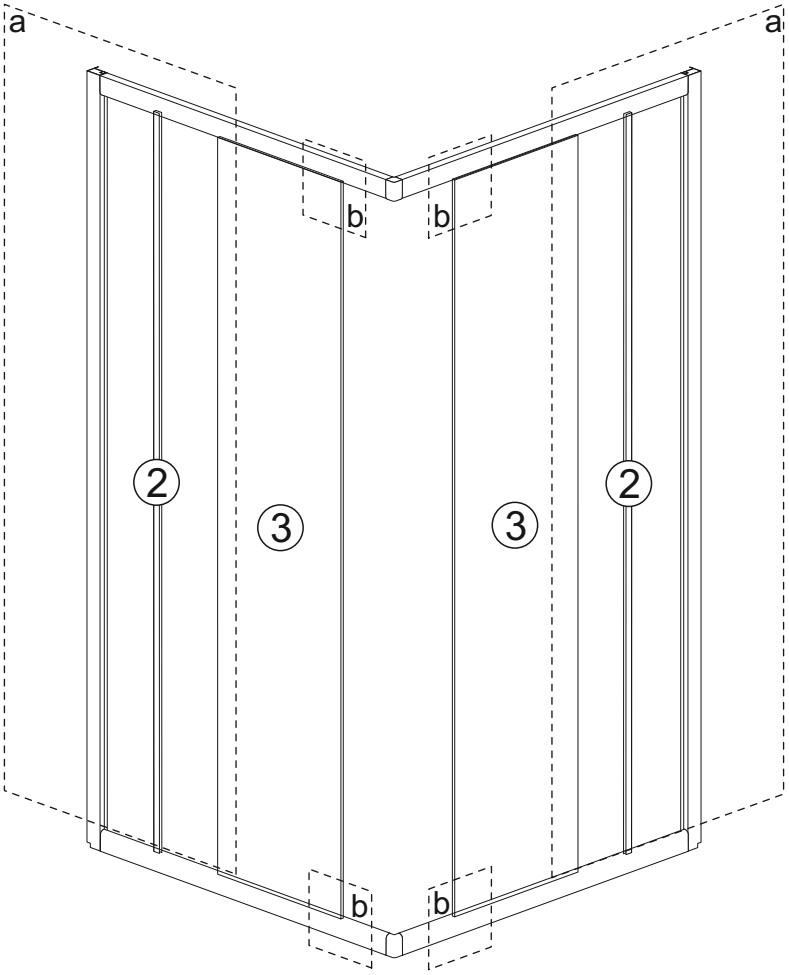

a
a
b
b
b
b
2
3
3
2

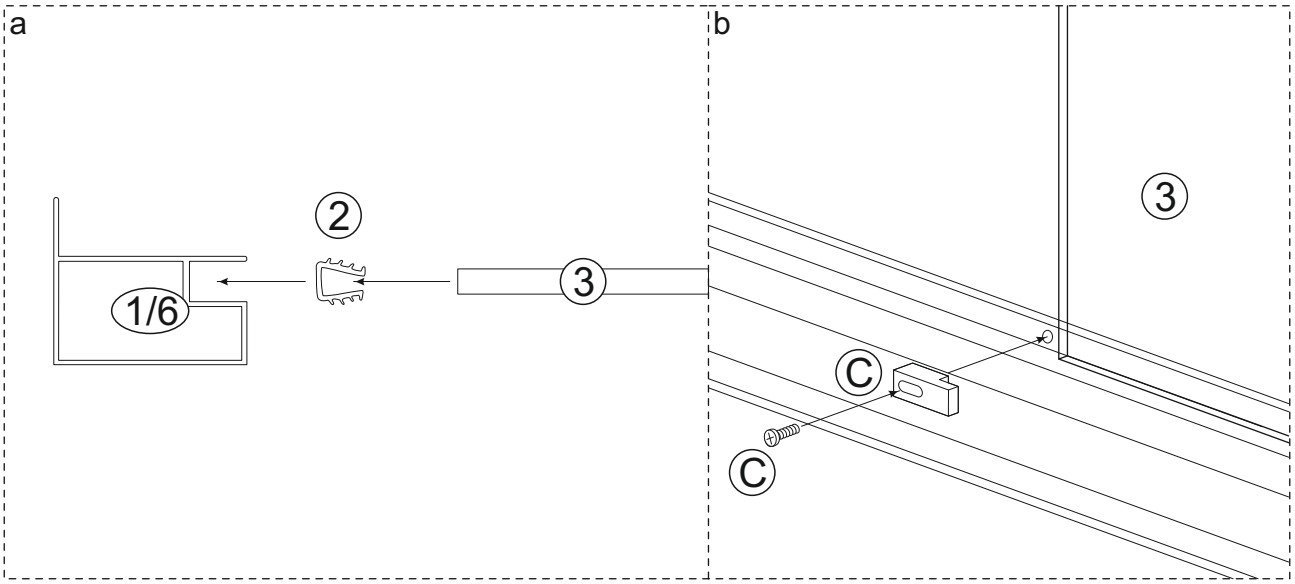

a
b
2
1/6
3
3
C
C

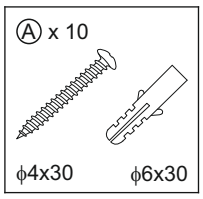



The studs attached to the set are not universal. The studs should be selected according to the wall the product is to be mounted to!

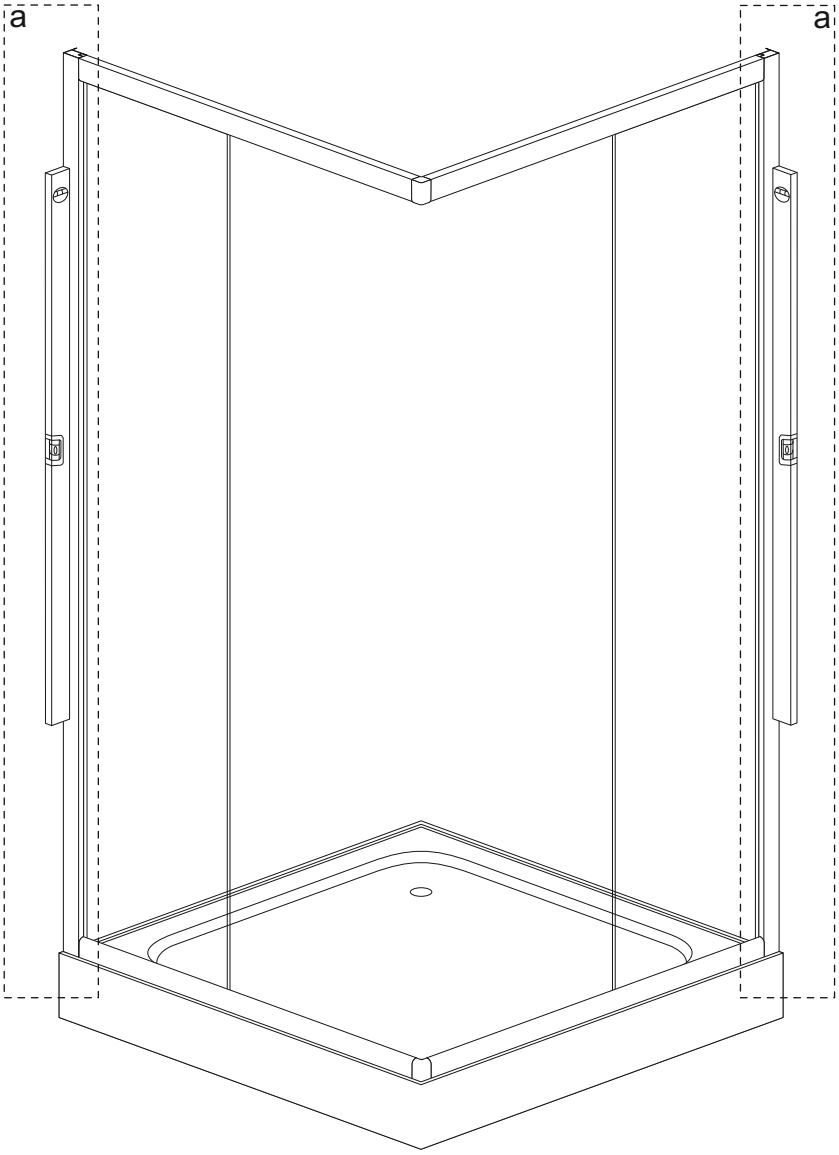


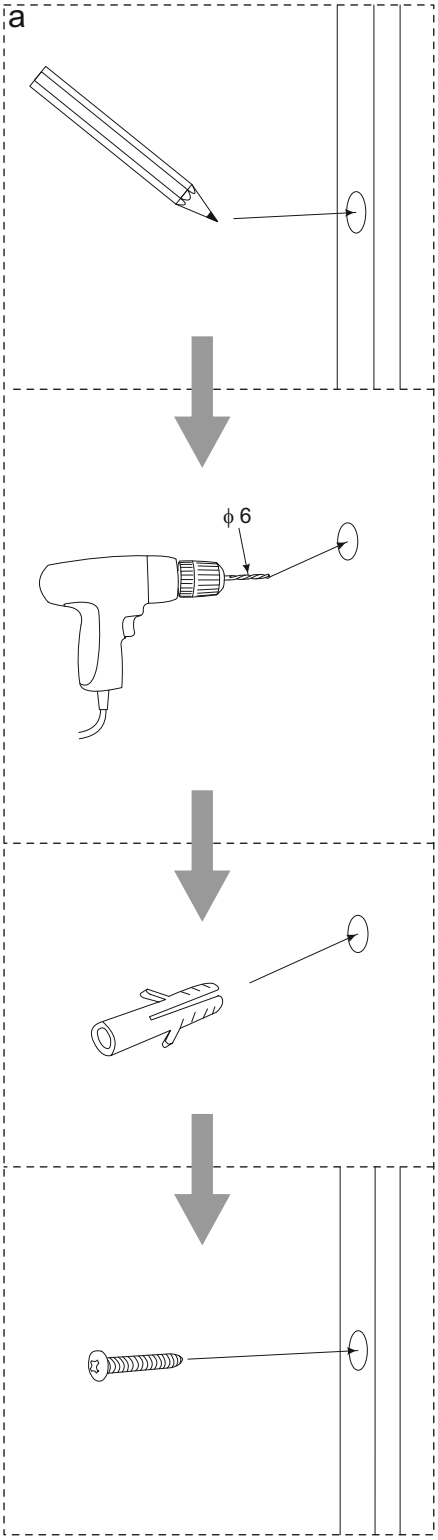


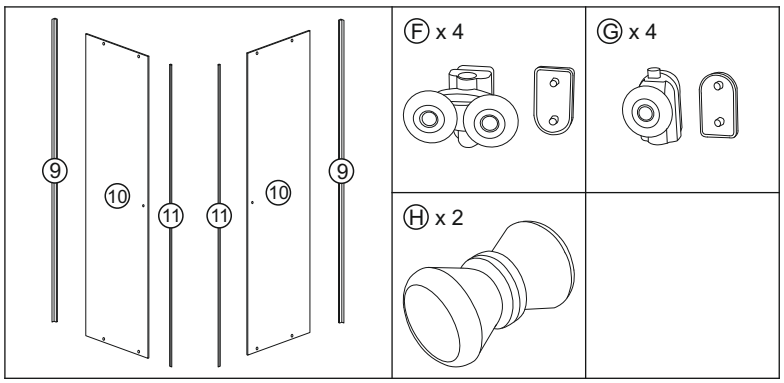

9
10
11
11
10
9
Ⓕ x 4
Ⓖ x 4
Ⓗ x 2

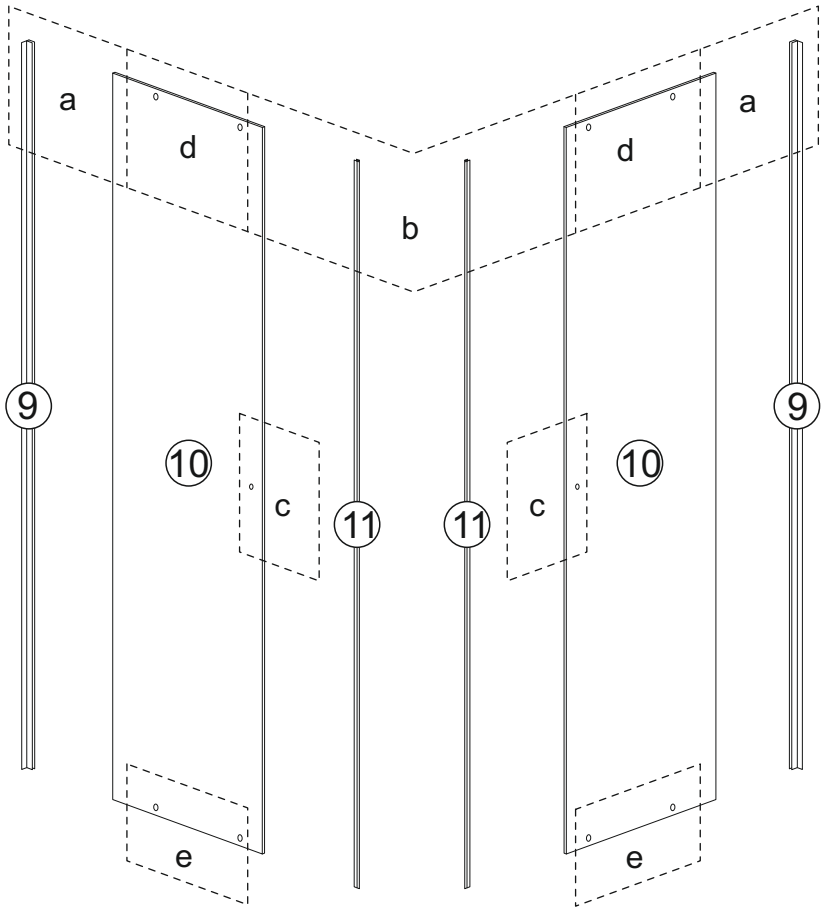

a
d
b
a
d
9
10
c
11
11
c
10
9
e
e

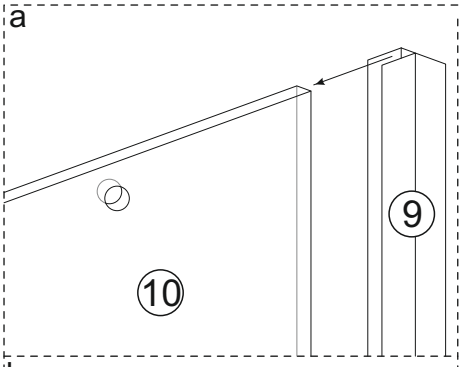

a
9
10

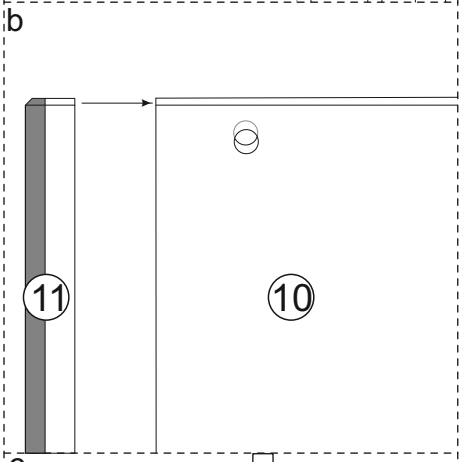

b
11
10

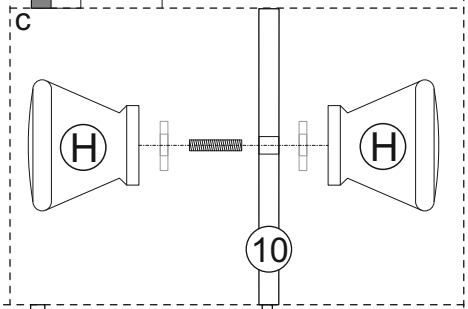
c
H
H
10

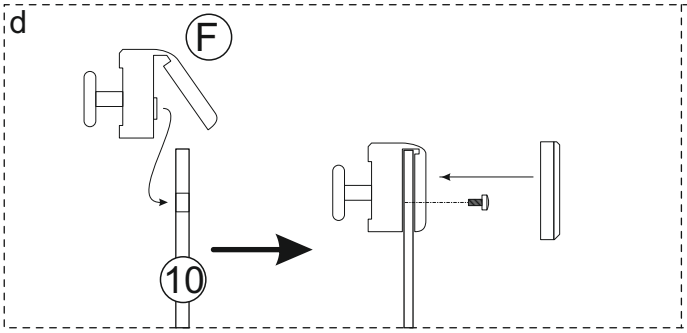

d
F
10

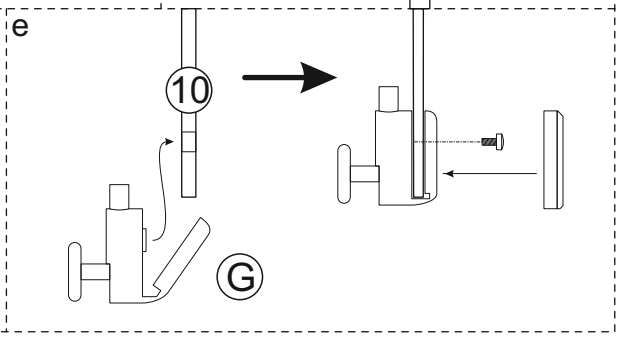

e
10
G

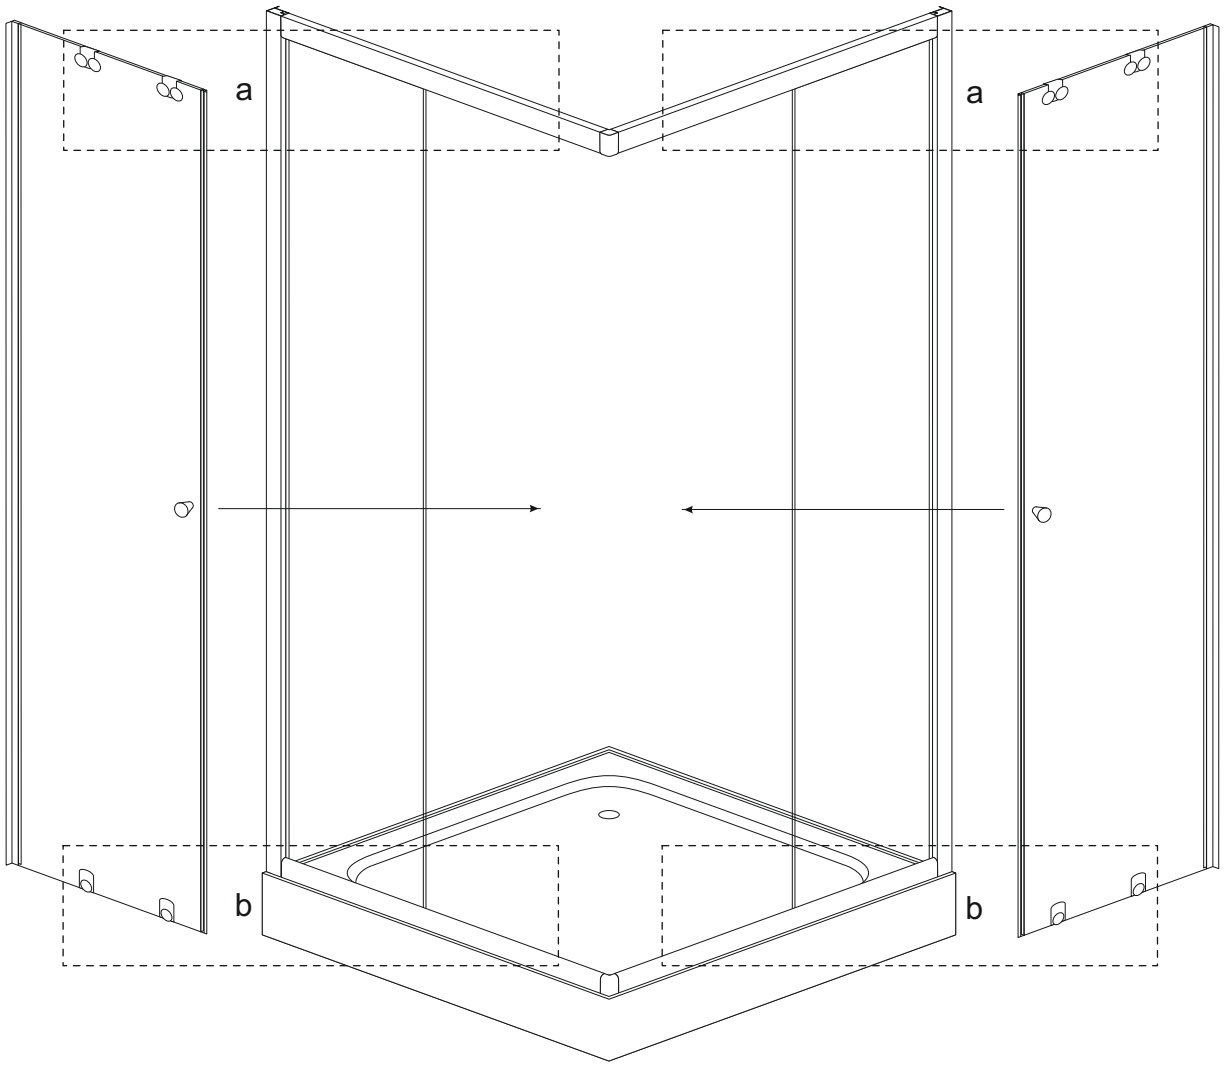


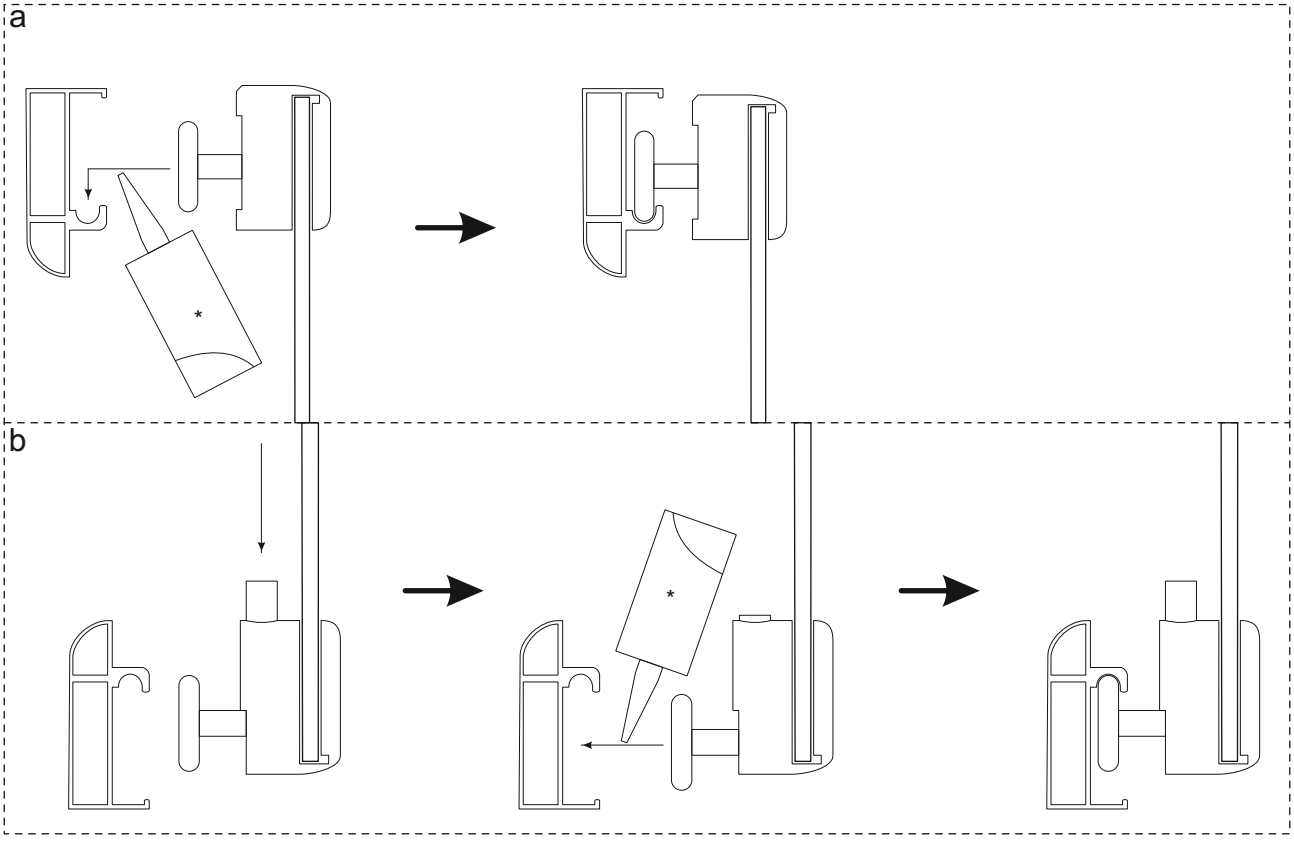


* - Smar silikonowy / Silikonfett / silicone grease / siliconenvet / Szilikonos kenőanyag / силиконовая смазка / Silikoninis tepalas.

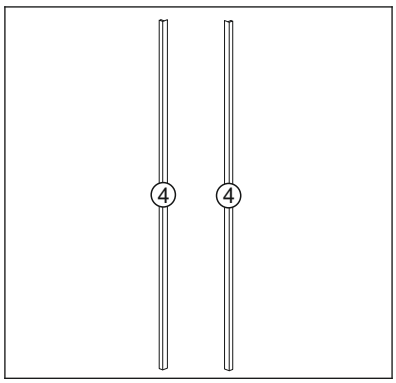
④
④

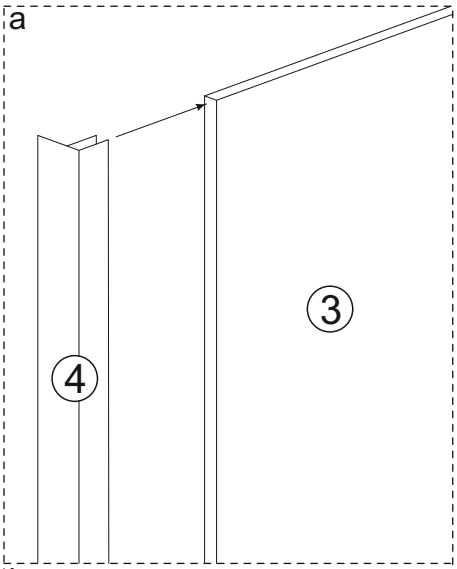
a
③
④

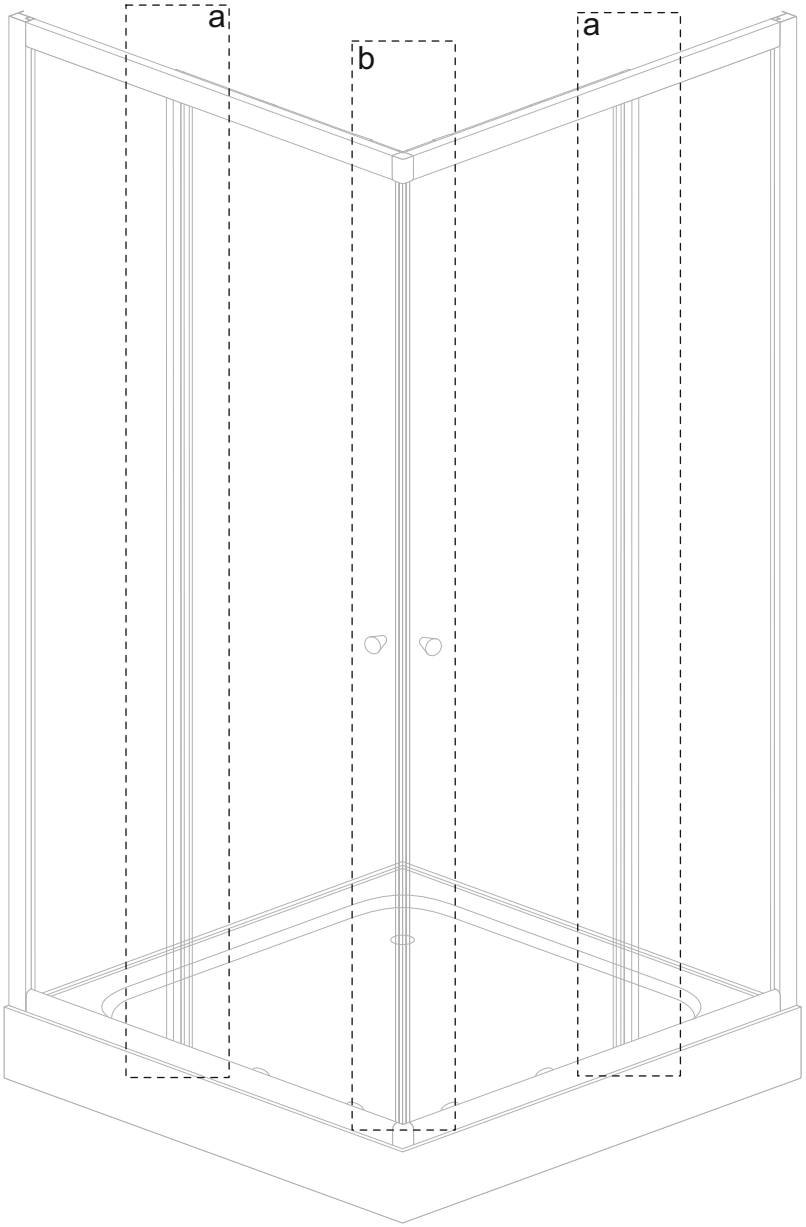
a
b
a

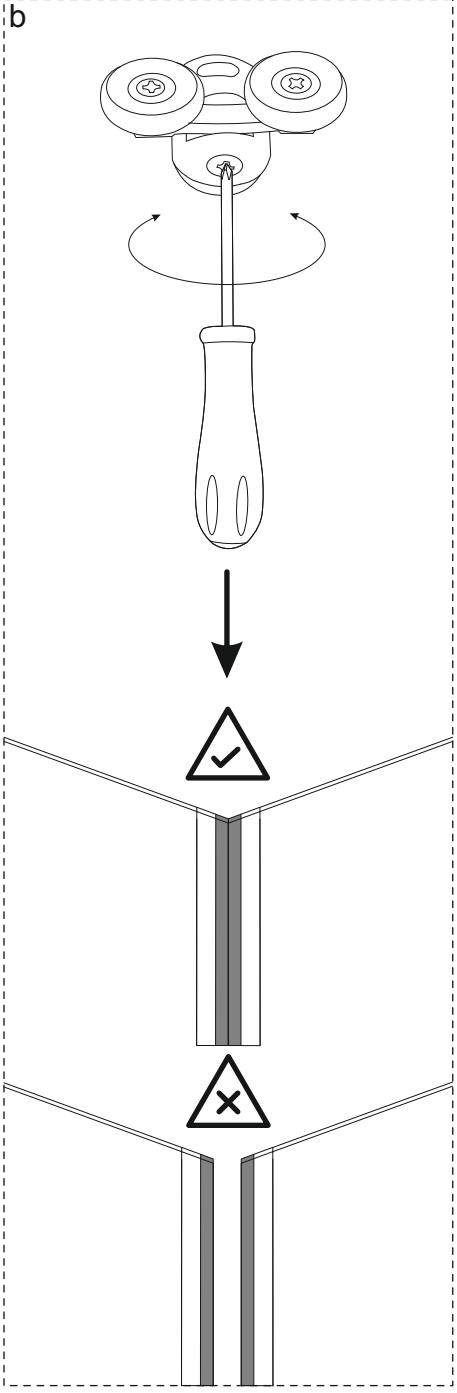
b

Clean all surfaces to be sealed before applying silicone! It is recommended to wait 24 hours before the adhesive sets. After silicone has bonded, check tightness and remove possible leakages

