


Shower Enclosure Installation Instructions

8317

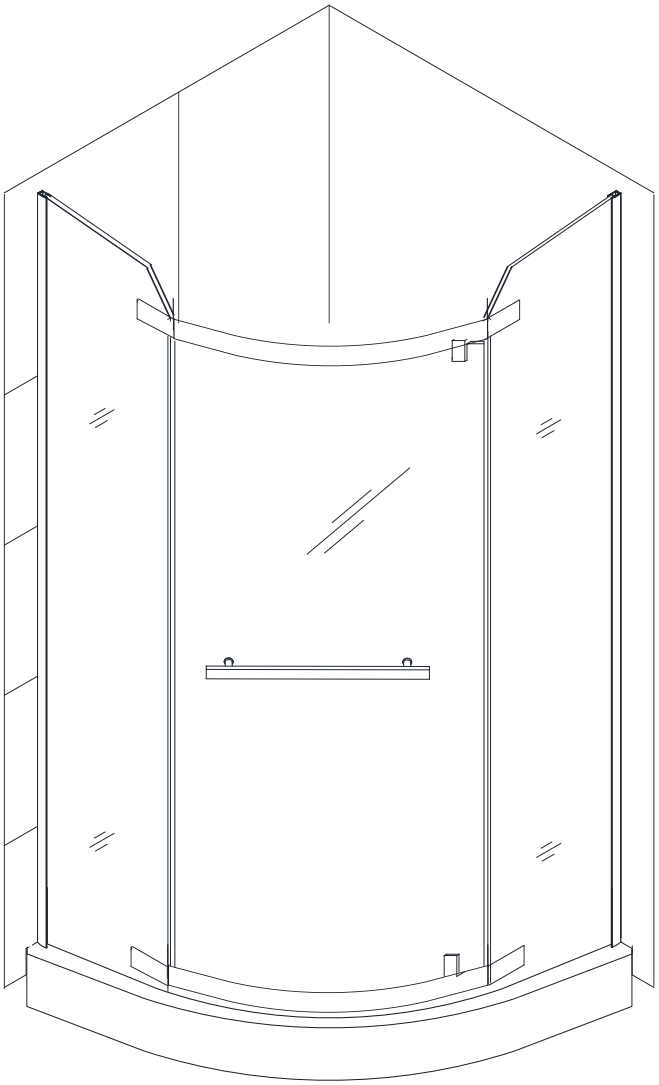


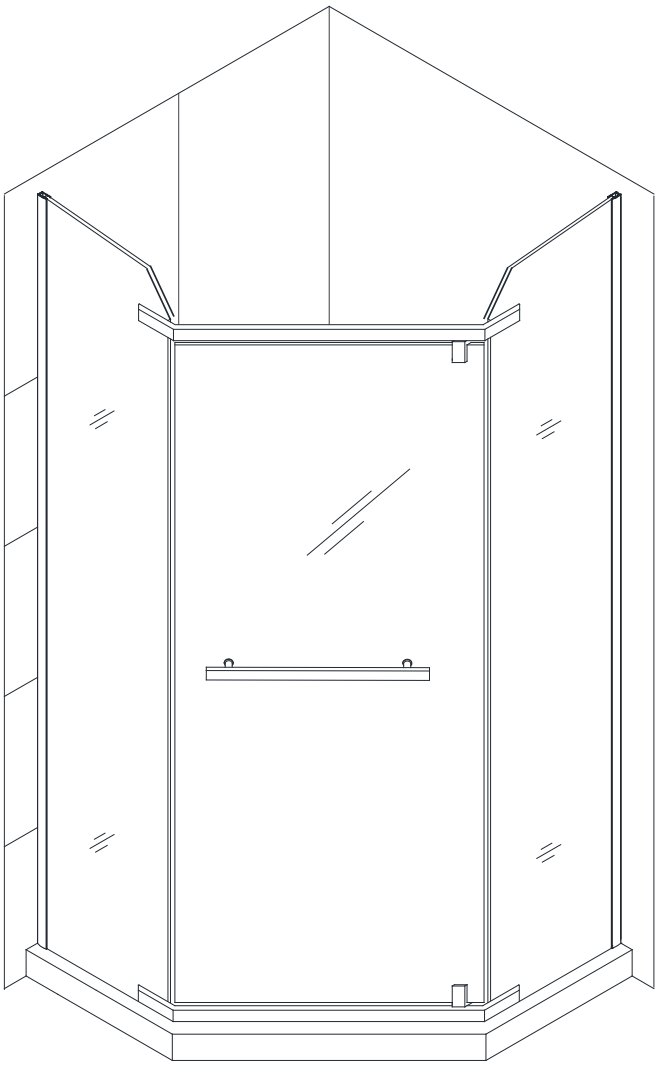


Detailed Diagram of shower door components

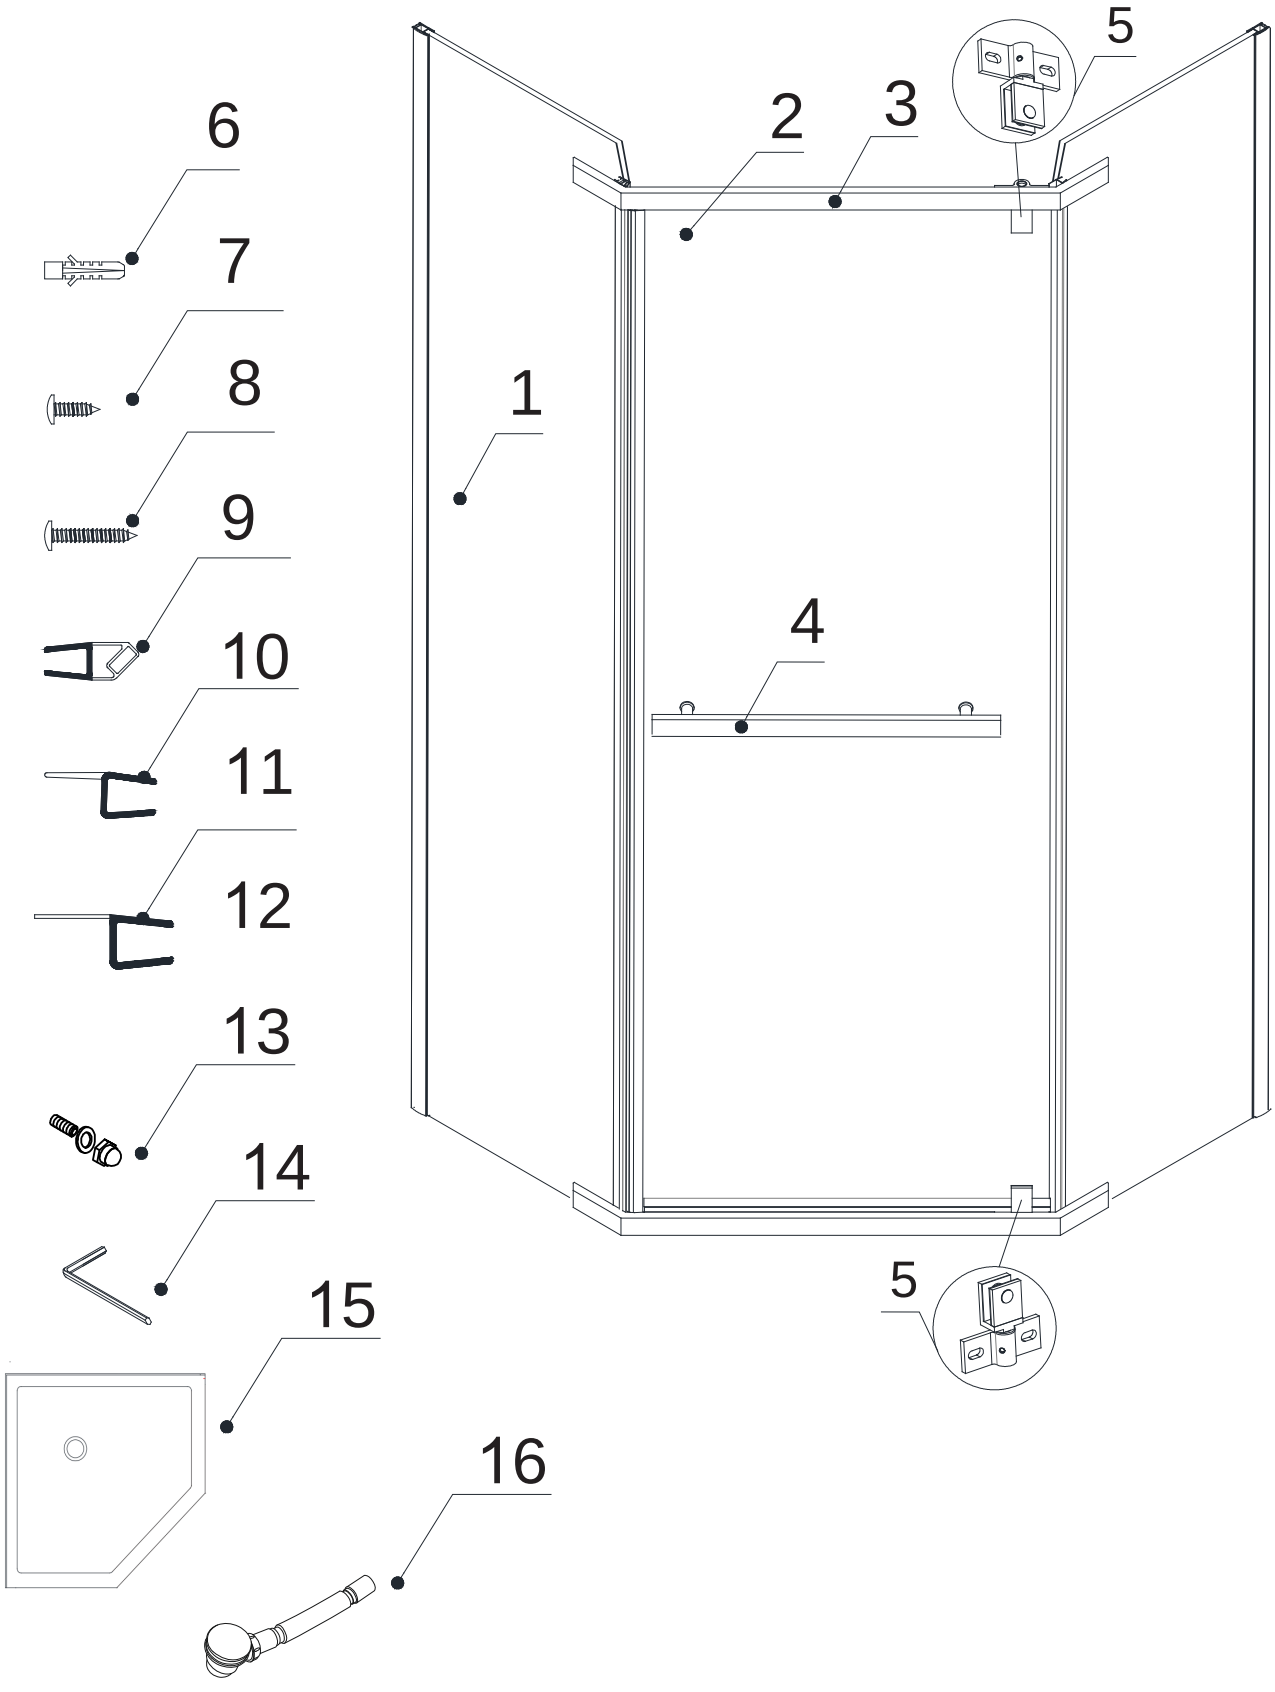


Install the Drainer

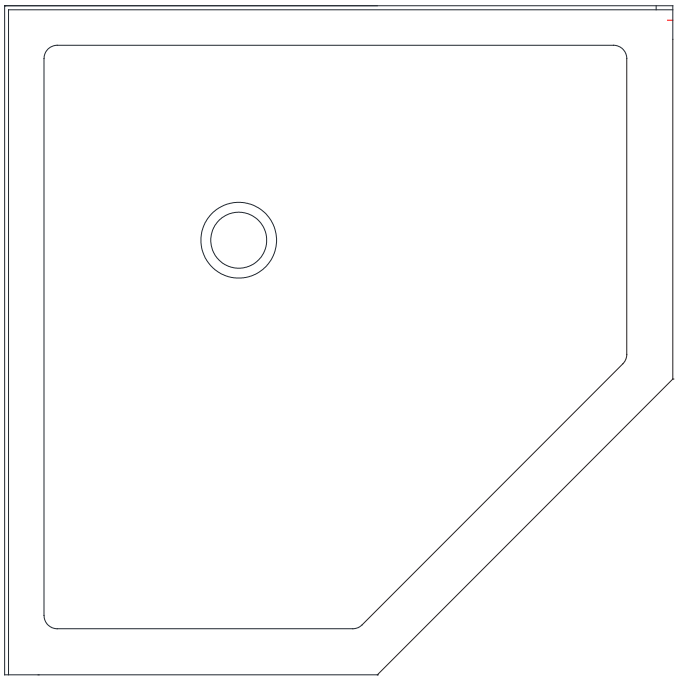


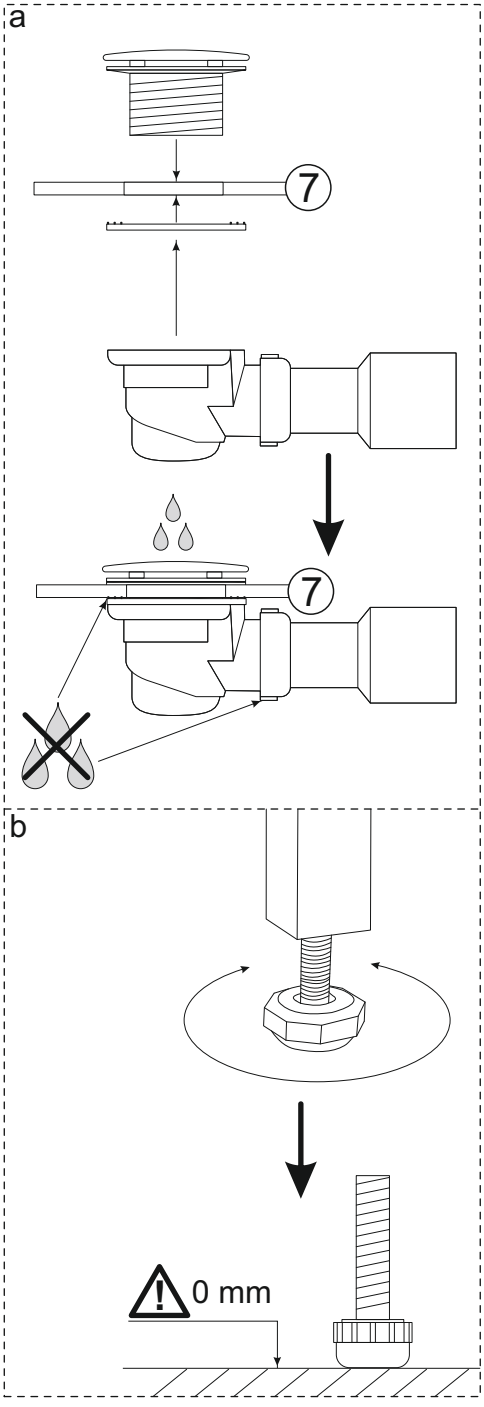

1

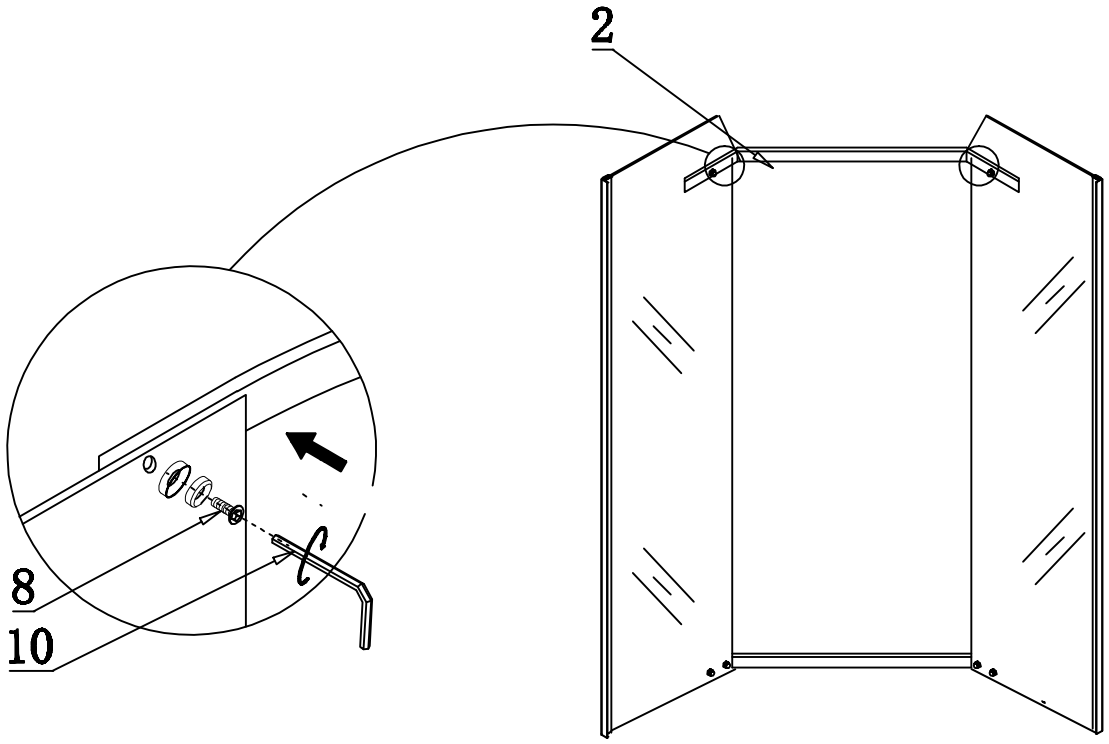


2

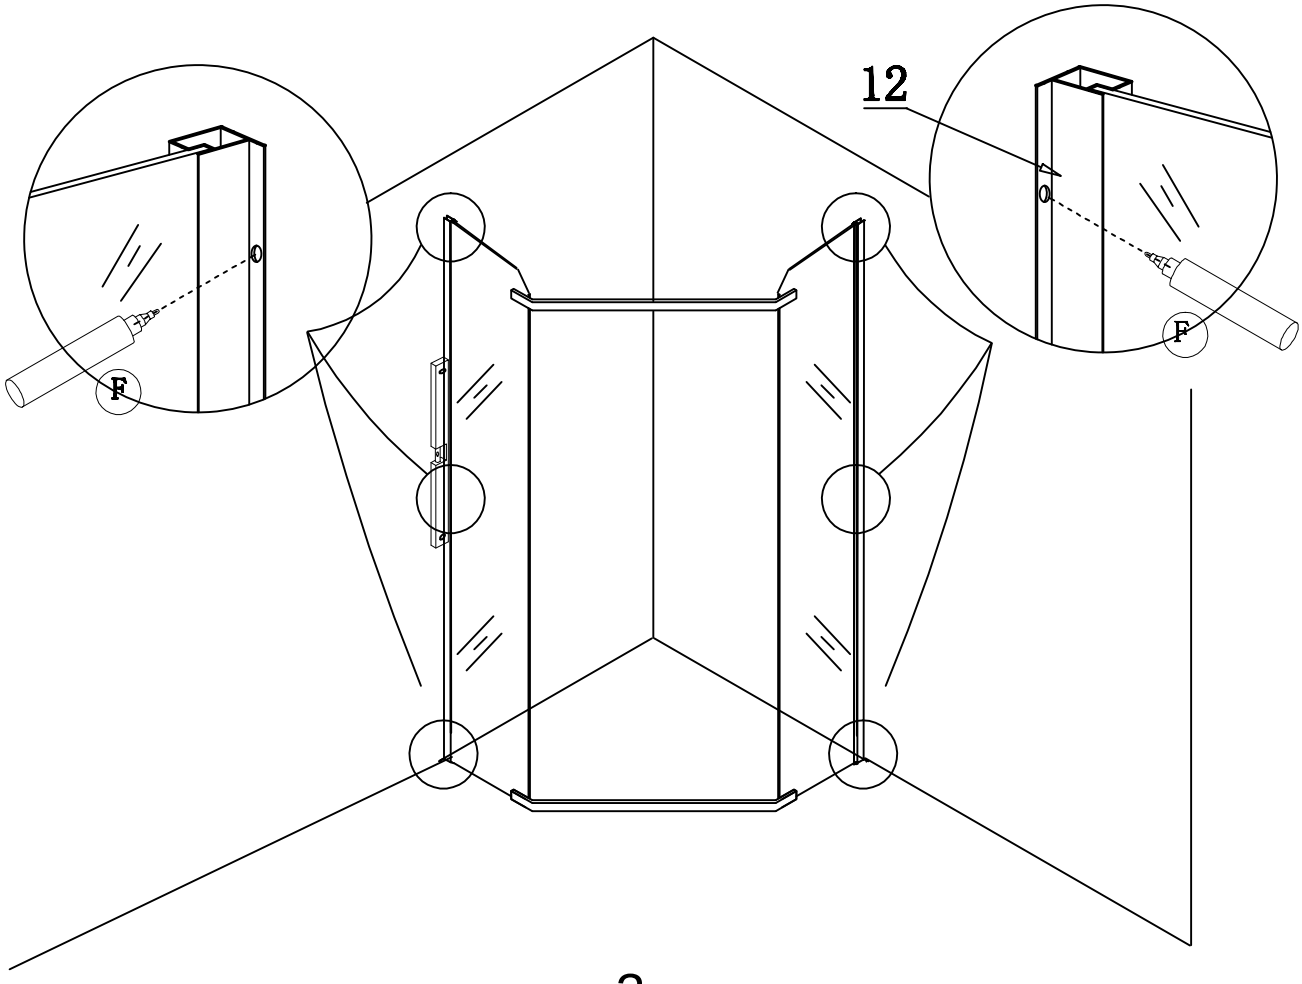


3


3

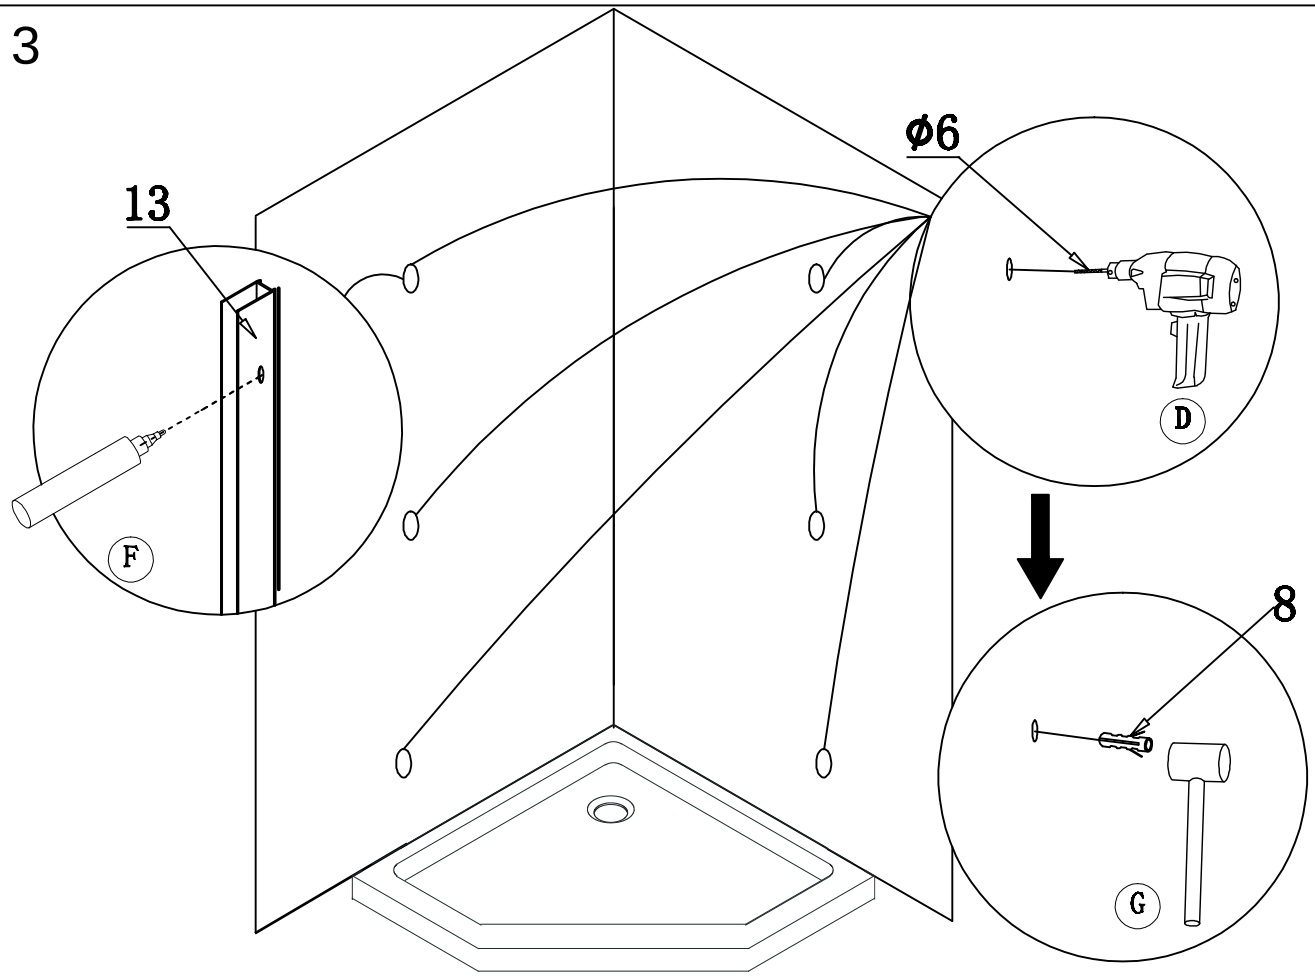


4

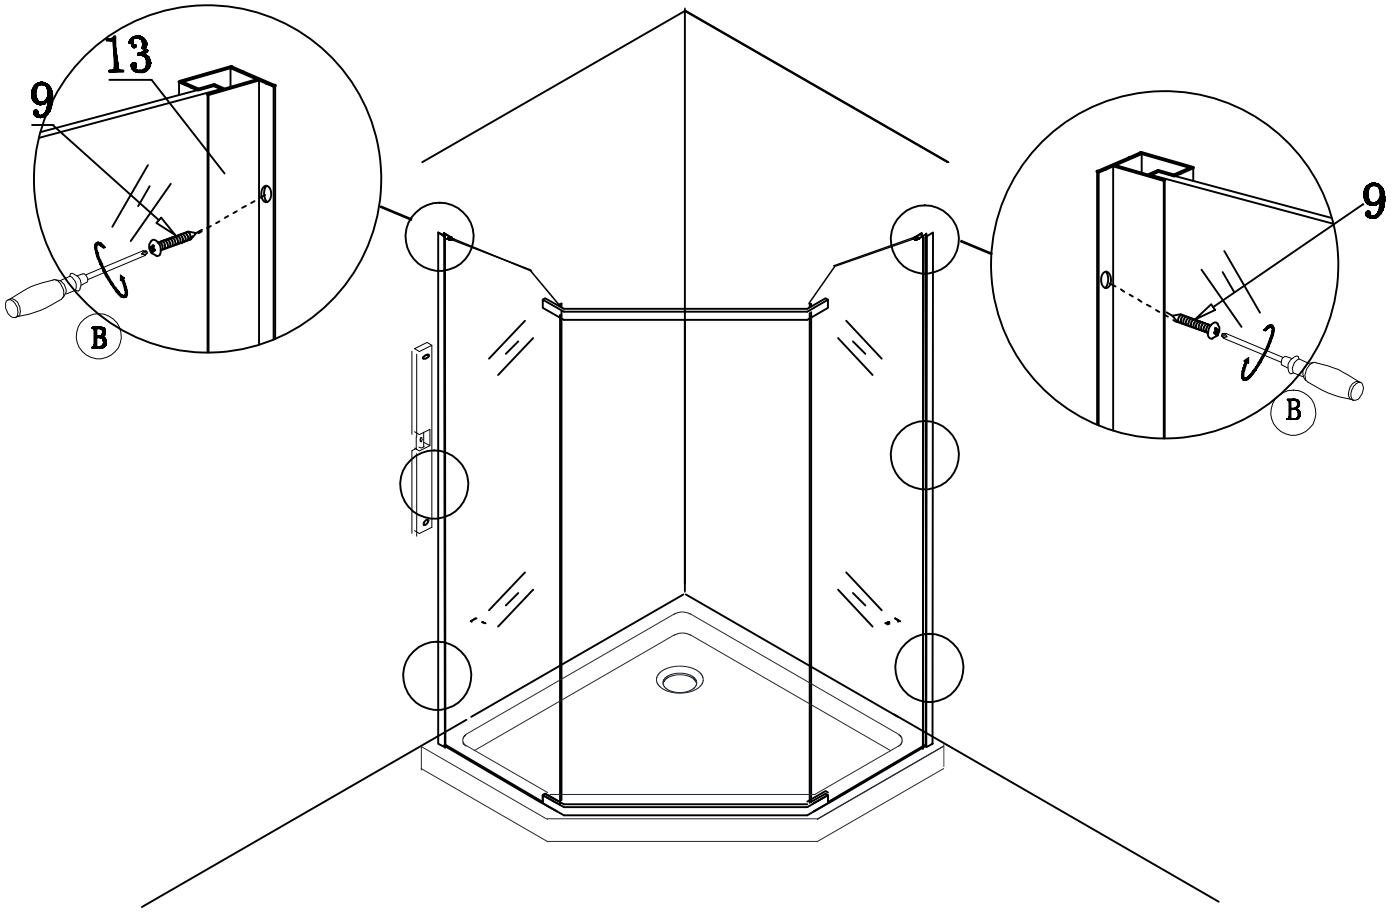


5

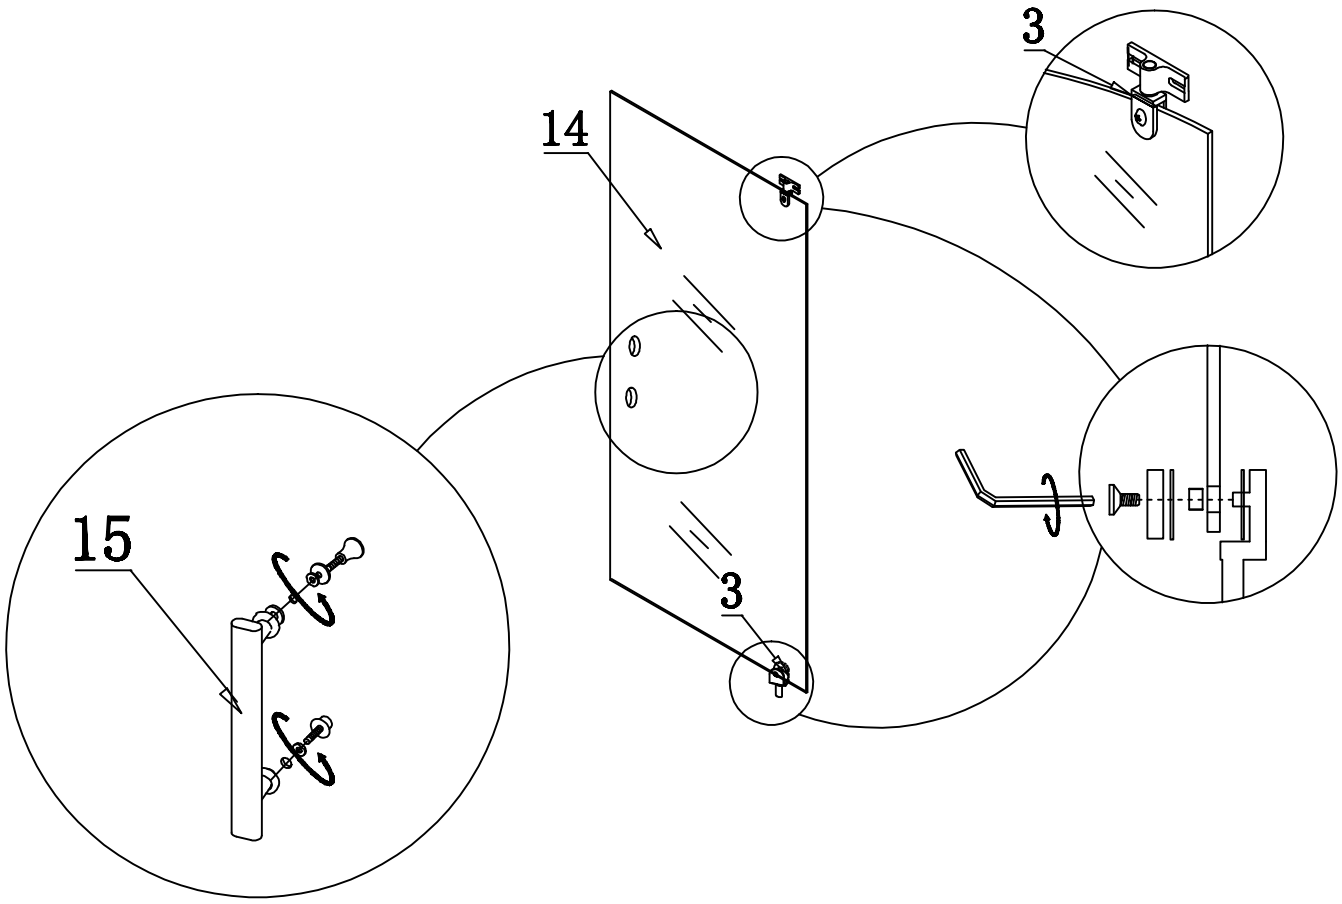

6

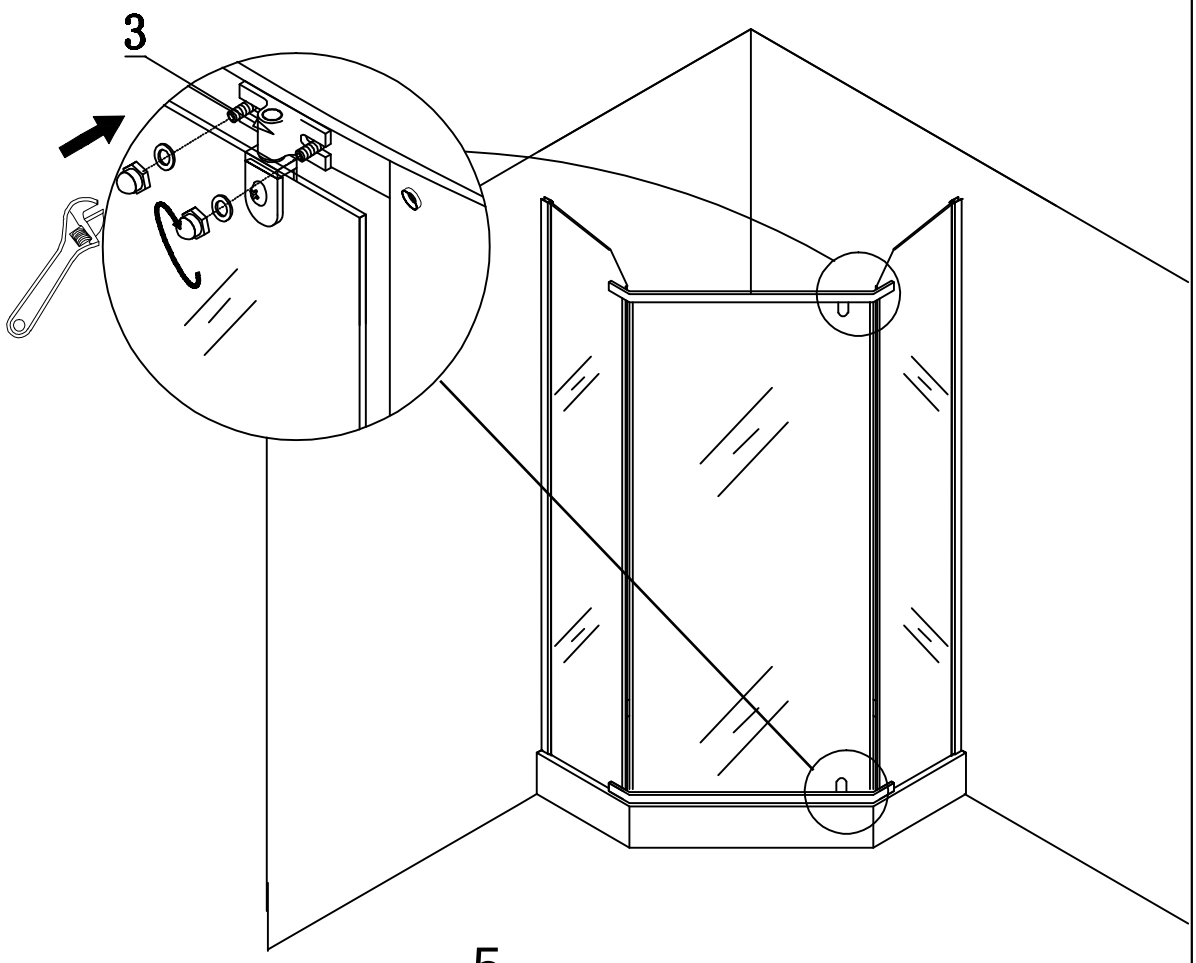

7

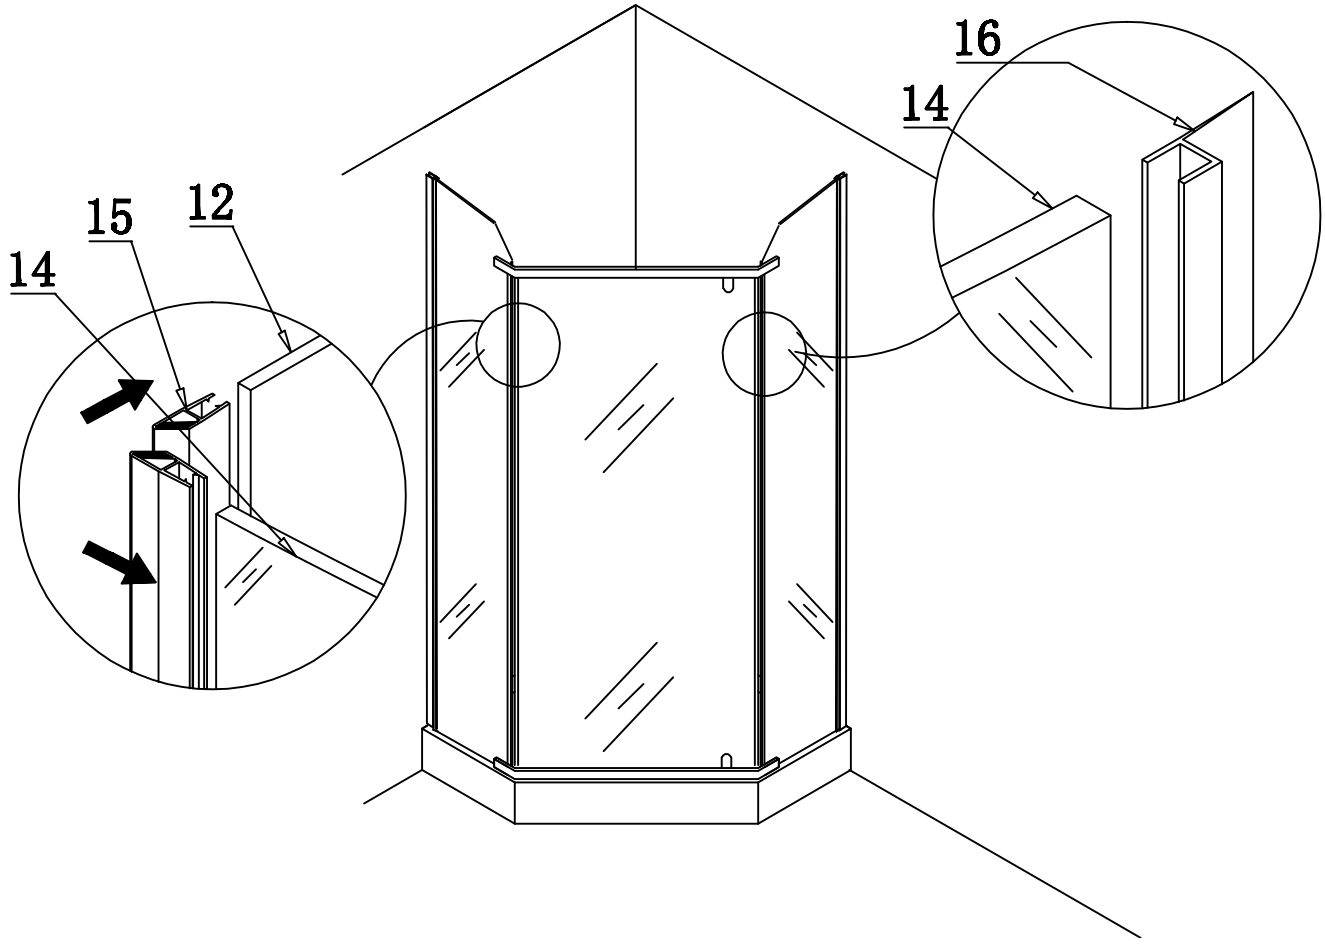

Install the **Handle** onto the outside of the **Door Glass** (put the knob on the magnet/strike side of the door)

Allow 24 hours for the silicone to cure before using the shower.

